



ET PRO8

CAUTION! Please read and understand these instructions before installing or operating this unit.

SPECIFICATIONS:

Model:	ET PRO8
Weight:	
ET PRO8:	4.5lbs./2.2kgs.
EZ Relay:	2.5lbs./1.2kgs.
Dimensions:	
ET PRO8:	18.9" (L) x 3.14" (W) x 3.5" (D)
EZ Relay:	15.5" (L) x 3.7" (W) x 1.7" (D)
Breaker:	5 Amp
Supply Voltage:	120V
Working Position:	Any Safe position
Warranty:	1 Year Limited Warranty


Introduction and Features:

The ET PRO8 has been tested at the factory and is in perfect operating order. Please make sure that all accessories are included:


- (1) EZ Relay Pack
- (1) ET PRO8 Controller
- (1) 9-pin com cable

This unit is an 8 channel lighting control system. Connect the ET PRO8 Controller to the EZ Relay Power Pack via the 9-pin com cable. Connect from the "Output" of the ET PRO8 Controller to the "Input" of the EZ Relay Pack. With this system you can activate and run 16 timed chases or 16 sound activated chases.

1 Year Limited Warranty: Eliminator Lighting warranty is valid from the date of purchase. Our 1 year limited warranty covers manufacturing defects only. Serial number, place of purchase with dated valid receipt must be submitted at time of service. Eliminator Lighting warranty does not cover items or parts prone to wear and tear: lamps, fuses, brushes and belts. Eliminator Lighting warranty is only valid with-in the United States.

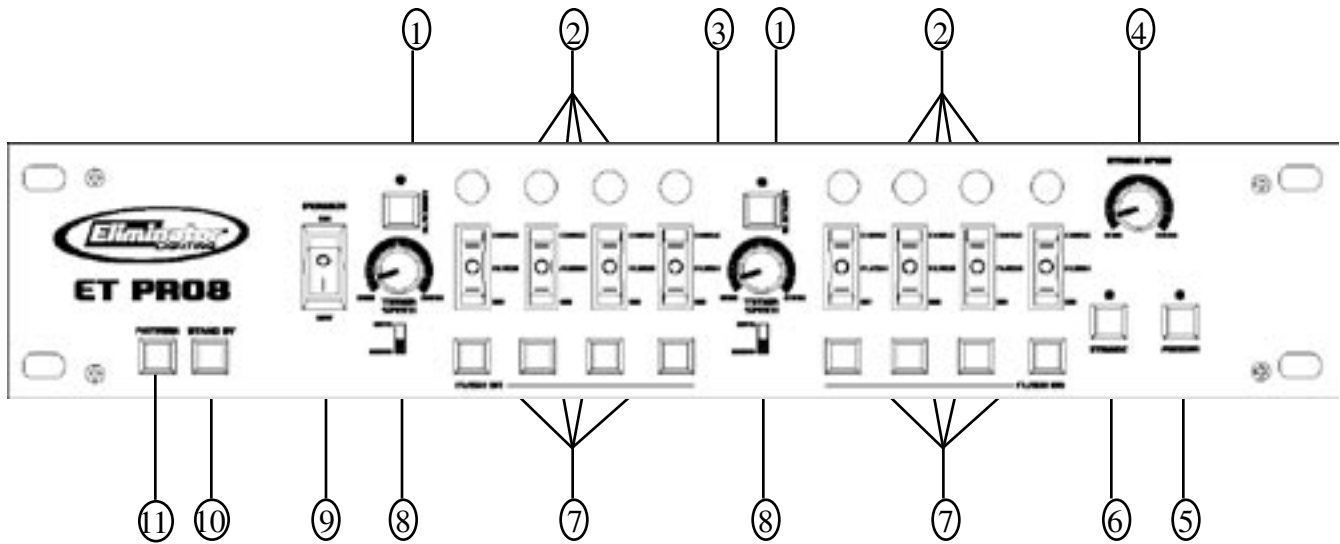

1. Blackout - Push this button to temporarily blackout the four (4) corresponding channels.
2. Multi-Function (Chase, Flash, and On) Switches - Designates that channel to stay on (On), temporarily stay on when the flash button is pressed (Flash), or activate a chase (Chase).
3. Chase Speed Adjustment - Use this knob to adjust the speed of a timed chase.
4. Strobe Speed Adjustment - Use this knob to adjust the Strobe speed.
5. Fogger Control Button - Use this button to control the output of a Eliminator fog machine only.
6. Strobe Control Button - Push this button to activate the connected Eliminator strobe.
7. Flash Buttons - Press and hold your desired button(s) to activate the corresponding channel(s). Release the buttons to turn "off" the channel(s).
8. Timer/Sound Active Selector Switch - With this switch you can select either a timed chase or a sound activated chase.
9. Power Switch - This switch will turn "on" the controller.
10. Stand By Button - This button activates Stand By.
11. Pattern Button - This will activate the chase mode.

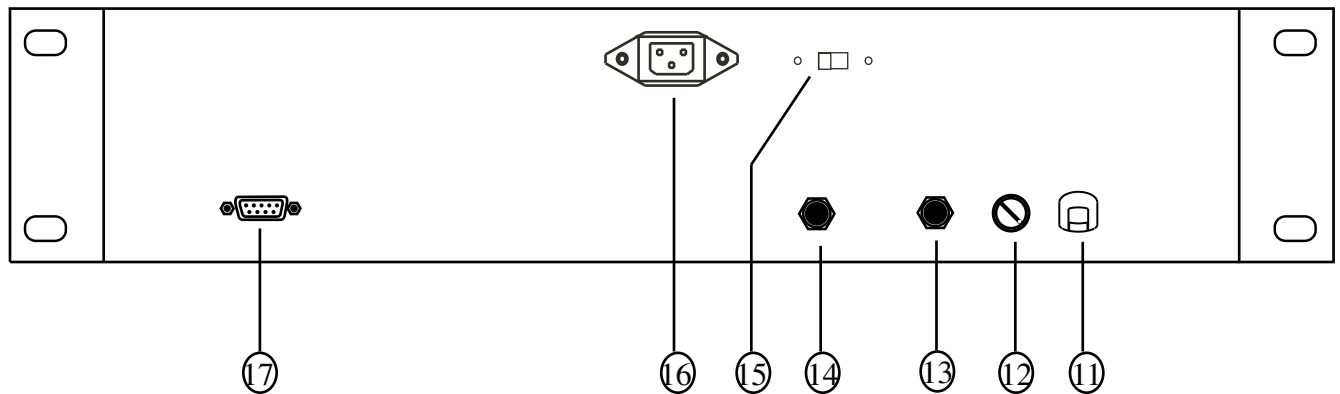

11. Power Cord - Connects to a standard AC outlet.
12. Fuse Holder - This holder contains a 1 Amp fuse. Always replace this fuse with an 1 Amp fuse.
13. EC 4 Connector Jack - 1/4" jack for connecting the EC 4 (sold separately)
14. Strobe Output - 1/4" mono jack output for Eliminator strobe lights only.
15. Voltage Selector - Use this switch to select a voltage input of 115v or 230v. Make sure to always disconnect the power before changing the voltage.

16. Fog Machine Jack - Connect either the E-118 MKII, E-119, EF-1000, or EF-400 fog machines to this jack.
17. Control Output - Use the included 9-pin com cable, and connect this to the EZ Relay.

INSTRUCTIONS:

1. Connect from the “Output” of the ET PRO8 Controller to the “Input” of the EZ Relay Pack.
2. Now connect the lights, strobe, fog machine, or EC 4 pack to the unit. Make all connections before power is applied.
3. Since the controller is connected to the EZ Relay Pack by the 9-pin cable, you only need to plug the EZ Relay into a power source. The ET PRO8 controller will get its power from the EZ Relay Pack.
4. Now with your desired lights connected to the controller you can now run timed chases or sound active chases. Or if you desire you can leave your lights on or temporarily have them on by pressing the Flash button. You can also control a fog machine with fog trigger when the machine is ready.